


PROTEGE TOUCH SENSE LCD KEYPAD


How to Change Passcode


NOTE* Before starting make sure your system is ready to arm. This entails having doors and windows closed as well as reducing motion in front of motion sensors. When system is ready, the arm button will light up green.


Step 1: Press the menu button 


Step 2: Enter master code (1234).


Step 3: Use the arrows on the right to scroll to number 5 “User Setup” in the main menu, then press number 5.

Step 4: The screen will then read “Select user to modify (01)”, press enter: 

Step 5: The next screen will read “Modify Code”, press enter  again.

Step 6: Screen will then say “Select Pin”, this is were you will use your own unique 4-digit pin. Once you entered your new pin, hit the enter  button.

Step 7: The following screen will say “Confirm Pin”, re-type the last 4-digit pin you used in the previous step, then hit enter: 

Step 8: Hit the  button, this brings you back to the main screen and your new pin is set.

Fast Arming / Disarming Your System Away

NOTE* Before starting make sure your system is ready to arm. This entails having doors and windows closed as well as reducing motion in front of motion sensors. When system is ready, the arm button will light up green.

Enter your master code (the default is 1234 if never changed)

You now have 30 seconds to leave before the system is fully armed

When returning home, once you open the door, you have 30 seconds to disarm the system with your code.

Fast Arming / Disarming Your System Stay

Press and Hold the Stay Home button (refer to the manual) for 5 seconds. Any entry or exiting will now trigger an alarm.

To disarm your system, enter your master code (the default is 1234 if never changed)